



rockGEAR™ — RS62116 Front Differential Glide Plate

Fits M210 (12 Bolt Dana 44) Front Axle
 2020-2018 Jeep Wrangler JL Rubicon
 2020 Jeep Gladiator JT Rubicon

READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION

P/N	DESCRIPTION	QTY.
RS176910	Glide Plate	1
RS860855	Sub Assy, JL Glide Plate Hardware	1
RS770128	Washer M8	4
RS603613	HHCS, M8-1.25 X 30mm	4
RS740028	U-Bolt, 5/16-18 X 5.63 X 3.56	1
RS7768	Nut 5/16-18 Nylock	2
RS7733	Washer 5/16 USS	2
RS42702	Thread Lock - Pillow Pack	1
RS82116	Instruction	1



- 1) Remove four bolts from the bottom of the front differential as shown in Illustration 1. Do not remove cover.
- 2) Loosely attach glide plate RS176910 to the differential cover with the supplied M8 bolts and washers. See Illustration 2.
- 3) Place U-bolt RS740028 over the rear of the differential housing. See Illustration 3.
- 4) Loosely attach glide plate rear of differential housing with U-bolt and 5/16" hardware. U-bolt must be pushed forward against rib on top of differential housing.
- 5) Snug the lower then upper differential cover bolts.
- 6) Torque the four differential cover bolts to 25 lb-ft.
- 7) Torque 5/16" nuts to 15 lb-ft.
- 8) Inspect cover for fluid leaks periodically. If a leak is detected, remove and reseal cover per manufacturer's recommendations.

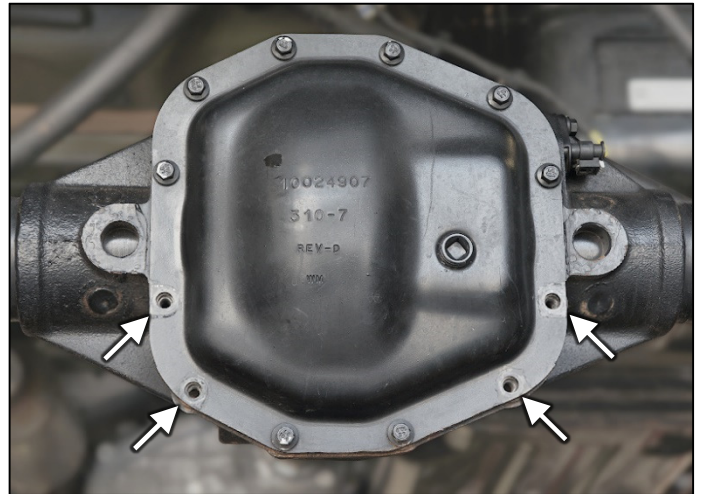


Illustration 1

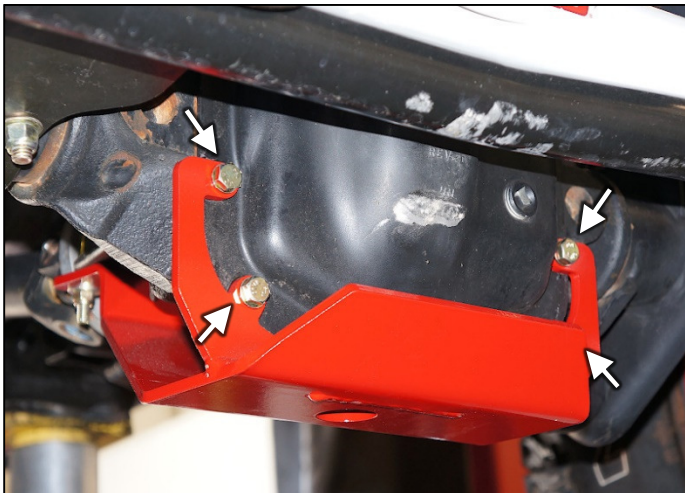


Illustration 2



Illustration 3