



rockGEAR™ — RS62125

Rear Shock Glider Plates
Fits 2018 Jeep Wrangler JL

READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION

P/N	DESCRIPTION	QTY.
RS176925	JL Rear Shock Glider, Left	1
RS176926	JL Rear Shock Glider, Right	1
RS860856	Sub Assy, JL Rear Shock Glider	1
RS770312	HHCS, M14-1.5 X 110MM GR 10.9	2
RS770251	Nut, M4-1.50 Nylock Gr 10.9	2
RS770109	Washer M14	4
RS42702	Thread Lock, Red	1
RS82125	Instruction	1




- 1) Park vehicle on a level surface. Set the parking brake and chock wheels.
- 2) Remove driver side shock lower mounting bolt.
- 3) Remove driver side lower control arm bolt at axle mount.
- 4) Place left shock glider RS176925 over shock and control arm mount.

NOTE: On some vehicles the weld or weld spatter may protrude down into the bracket mounting area. If required remove spatter or grind glider plate.

- 5) Attach glider and lower control arm with supplied M14 X 110mm bolt.
- 6) Attach glider and shock with OE hardware.

TIP: To give more protection to the bolt threads, install bolt with head facing in.

- 7) Torque lower control arm hardware to 90 LB-FT, and shock hardware to 75 LB-FT.

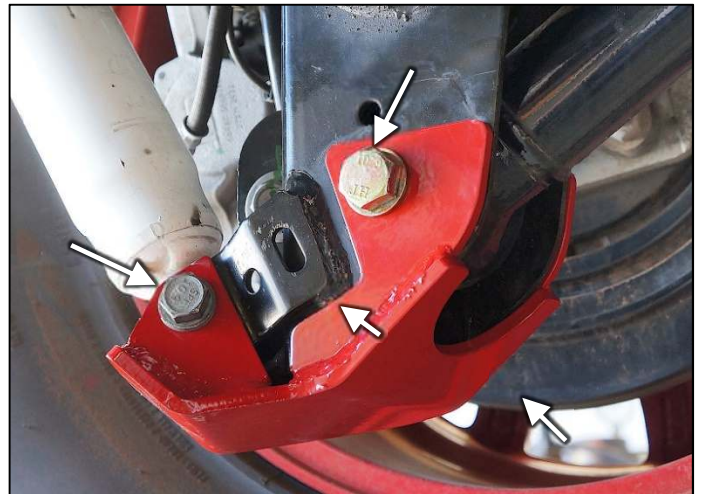

www.gorancho.com

Rancho Technical Department 1-734-384-7804.